

PRODUCT CARD

ETRONIC



BURNER 1500
ETRONIC

DIMENSIONS/WYMIARY CAŁKOWITE :1500mm x 194mm x 290mm

Typ - do zabudowy w otworze
Wymagany otwór pod palnik -
1490mm x 210mm x280mm

Type - for recessed
installation
Required hole for burner -
1490mm x 210mm x280mm



SZYBA : Bezbarwna, OPTIwhite,kanciasta 8mm (WYM. 1140mm x100mm 2szt)
GLASS: Colorless, OPTIwhite, angular 8mm (DIMENSIONS 1140mm x 100mm 2pcs)

PALNIK/ BURNER - 1500 ETRONIC

DŁUGOŚĆ LINII OGNIĄ/ FIRING LINE LENGTH : 1400mm

CZAS SPALANIA/ BURNING TIME:2,5-8 h

POJEMNOŚĆ/ FUEL TANK CAPACITY -9,8L

WYSOKOŚĆ OGNIĄ/ FIRE HEIGH - do 25cm/ up to 25cm

REGULACJA WYSOKOŚCI PŁOMIENIA / FLAME HEIGH ADJUSTMENT - 10 Levels

WYDAJNOŚĆ kW/HEATING CAPACITY - 9,9kW

RODZAJ PALIWA/ FUEL TYPE: Bio Ethanol 96%

WTYCZKA/POWER CONNECTION- Standard, cable 1,5m

MATERIAŁY/MATERIALS : metal, stal malowana proszkowo (stainless steel), aluminium

KOLOR STANDARDOWY/COLOR - czarny/ black

WAGA/WEIGHT - 46kg

7 czujników bezpieczeństwa: Czujnik CO2 - Czujnik temperatury - Czujnik skutków - Czujnik sejsmologiczny - Czujnik przepełnienia - Czujnik napięcia paliwa - Czujnik bezpieczeństwa układu tankowania/

7 safety sensors: Co2 sensor - Temperature sensor - Consequences sensor - Seismologists sensor - Overflow sensor - Fuel voltage sensor - Safety sensor of the refueling system.

Posiada automatyczny system tankowania/ Refueling: Electric pump.

Ukryty panel kontrolny z wyświetlaczem dotykowym/ hidden control panel with touch screen

The minimum distance from combustible materials is 1 m

Do not use the fireplace in a place where the fire will be exposed to drafts

The burner can be installed in a room with a minimum area of 50m2

If we light the fireplace and then move it, it will be blocked for at least 24 hours.

Never open the fireplace as it will become completely blocked and any warranty will be void.

Do not start the device if the room temperature is below 17°C or if the burner/fuel is cold.

Always remember that this is real fire, so always be carefull, read manual and follow basic safety rules/

The minimum distance from combustible materials is 1 m

Do not use the fireplace in a place where the fire will be exposed to drafts

The burner can be installed in a room with a minimum area of 50m2

If we light the fireplace and then move it, it will be blocked for at least 24 hours.

Never open the fireplace as it will become completely blocked and any warranty will be void.

Do not start the device if the room temperature is below 17°C or if the burner/fuel is cold.

Always remember that this is real fire, so always be carefull, read manual and follow basic safety rules

Option with 1
glass



Option with 2
glasses



Magia ognia wszędzie tam, gdzie chcesz...

BURNER 1500

ETRONIC