


ELECTRIC FIREPLACE

www.fireandicefireplaces.com

INSTALLATION AND OPERATION INSTRUCTIONS FOR

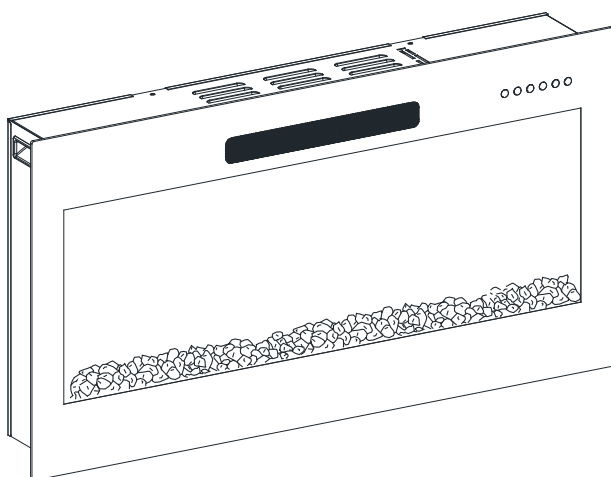

EVO3620
PL36

EVO4220
PL42

EVO5020
PL50

EVO6020
PL60

SAFETY INFORMATION



WARNING

if the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other.

INSTALLER: LEAVE THIS MANUAL WITH THE APPLIANCE.

CONSUMER: RETAIN THIS MANUAL FOR FUTURE REFERENCE.



WARNING: This product can expose you to chemicals including lead in the wiring, which is [are] known to the State of California to cause birth defects of other reproductive harm. For more information visit: www.p65warnings.ca.gov


IMPORTANT INSTRUCTIONS

This section provides important safety precautions to follow when using electrical appliances to reduce the risk of fire, electrical shock, and injury.


1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials at least 3 feet away from the heater to avoid burns and fire hazards.
3. Extreme caution is necessary when using heaters around children or leaving them unattended.
4. Do not operate a malfunctioning heater and have it inspected by a professional before reusing.
5. Always unplug the appliance when not in use and do not use it with a damaged cord or plug.
6. Do not operate any heater with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Any repairs to this fireplace should be carried out by a qualified service person.
9. Under no circumstances should this fireplace be modified. Parts having to be removed for servicing must be replaced prior to operating this fireplace again.
10. Do not use outdoors.
11. The appliance must be properly grounded and not used in bathrooms or near water containers.
12. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
13. To disconnect this appliance, turn controls to the off position, then remove plug from outlet.
14. Connect to properly grounded outlet only.
15. This appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the current CSA C22.1 Canadian Electrical Code or for USA installations, follow local codes and the National Electrical Code, ANSI/NFPA NO.70.
16. There is a protective thermostat limiter inside the heater. When the inner temperature overheats, the thermostat limiter will shut off the power supply to avoid the risk of fire damage to the appliance.
17. The heaters must not be located immediately below a socket-outlet.
18. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the appliance.
19. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where opening may become blocked.
20. This appliance has hot and arcing or sparking parts inside. Do not use where gasoline, paint, or flammable liquids are used or stored. This fireplace should not be used as a drying rack for clothing. Christmas stockings or decorations should not be hung around it.
21. Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
22. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

SAVE THESE INSTRUCTIONS


PACKAGE CONTENTS

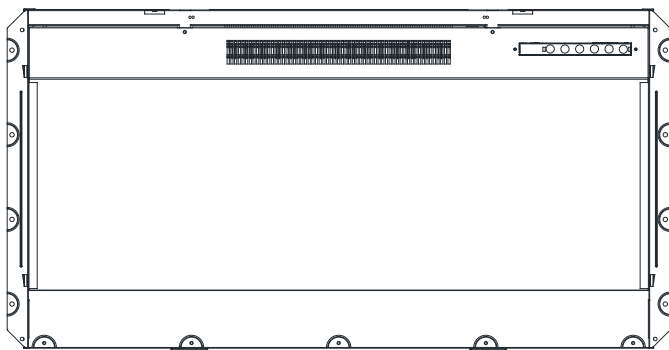


Fireplace

 


Remote Control

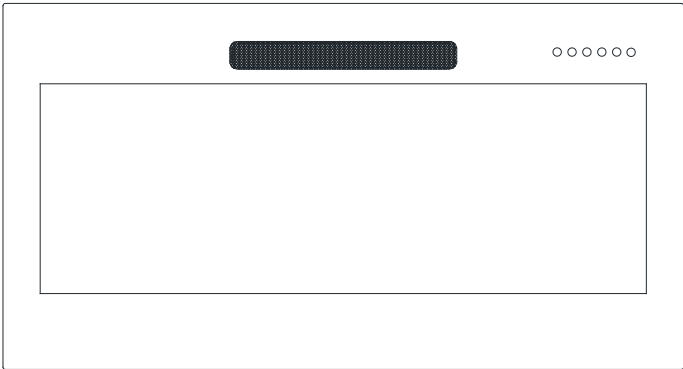


Glass Front

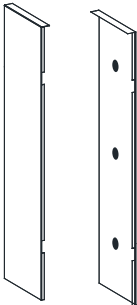


side frames

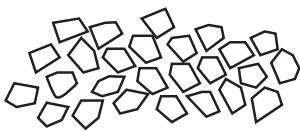

Acrylic Crystals

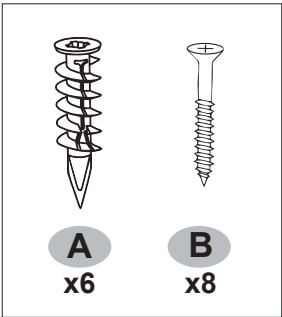

Hardware Screw Bag

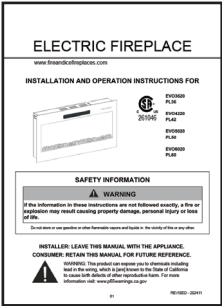

Manual

ELECTRICAL SPECIFICATIONS

- Voltage: 120VAC
- Rating: 1400 Watts
- Frequency: 60Hz


PRE-INSTALLATION

GROUNDING INSTRUCTIONS:

This heater is for use on 120 volts. The cord has a plug as shown at (A) in figure 1. An adapter as shown at (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

NOTE: Adapters are NOT for use in Canada

Figure 1

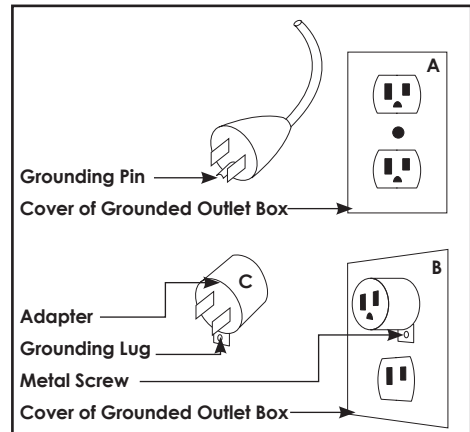

PLANNING INSTALLATION

Before you begin assembly, locate the instructions and hardware. Compare all parts with the Hardware Included and Package Contents lists. Be sure you have all the parts and can identify them. A helping hand is always good. Assemble your fireplace with an adult assistant if possible. Some pieces are heavy and will need to be held by a helper. Assembly time will take approximately 15-30 minutes.






CAUTION: This carton includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.




WARNING: Do not install unit on shelves, raised platforms, beds, blankets, pillows etc. Keep combustible materials such as furniture, bedding, papers, clothes and curtains at least 3 feet (914 mm) from the fireplace.



Do not share a socket with other appliances when using electric fireplace, please use a dedicated socket.

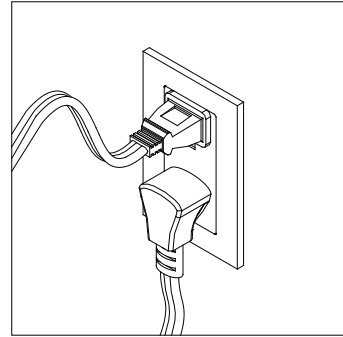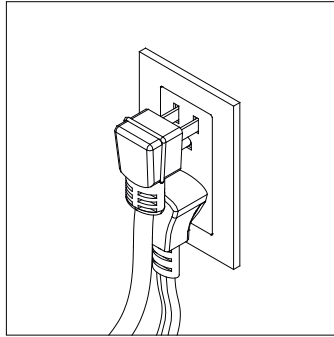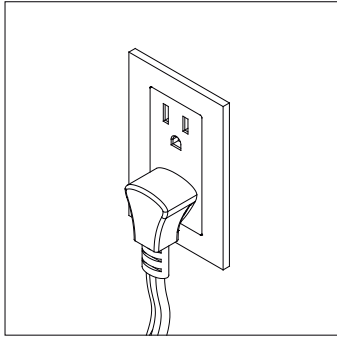

Never use with an extension cord or relocatable power tap (outlet / power strip).

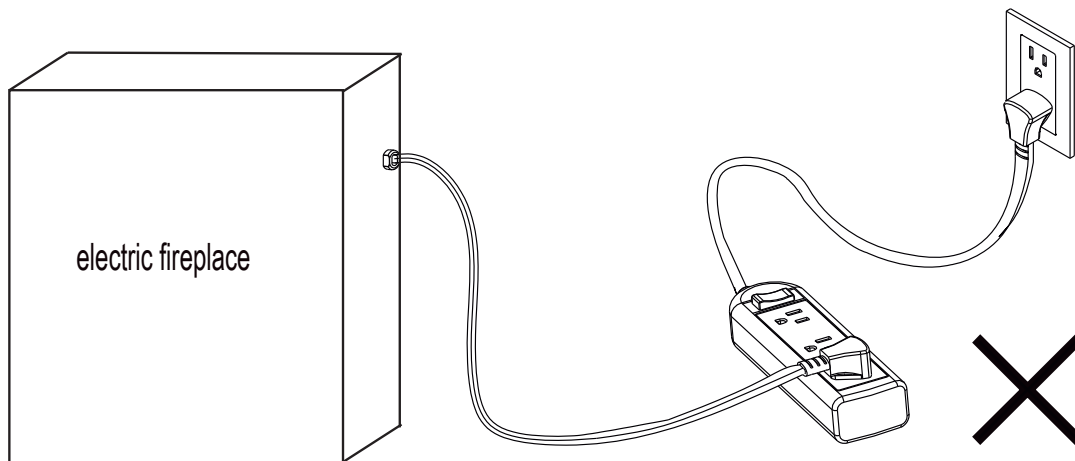


TOOLS REQUIRED (NOT INCLUDED)



Safety goggles



Phillips screwdriver

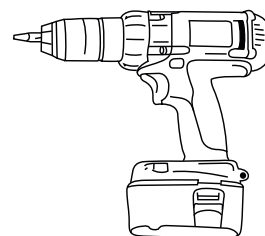


Power drill

INSTALLATION (WALL MOUNTING)

The text provides instructions for mounting and securing a fireplace to a wall. The dimensions of the mounting bracket and the required screws are given for different models. The text emphasizes the importance of securely attaching the fireplace to prevent personal injury and property damage.


1. Remove the mounting bracket from the back of the fireplace.

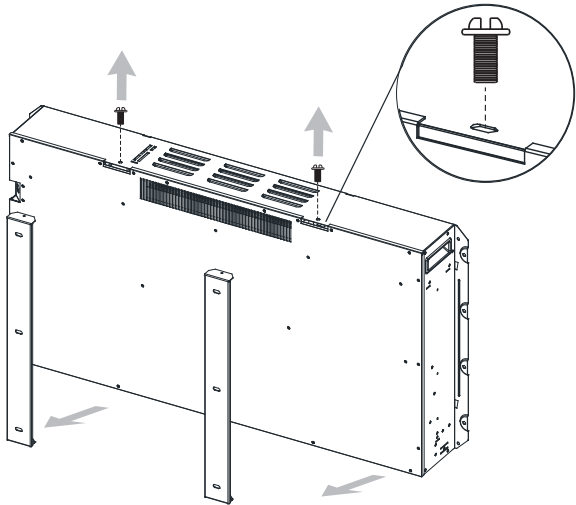


2. Attach the mounting bracket to a wall.

IMPORTANT: This unit is designed to be securely attached to a wall with a fixed structure. Failure to do, so might result in personal injury and/or property damages.


NOTE: Wall anchor is not needed if the bracket is to be mount directly on the studs.

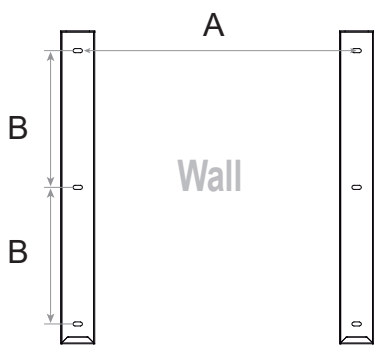


Model	A	B
EVO3620/PL36	16in / 40.6cm	7.9in / 20cm
EVO4220/PL42	16in / 40.6cm	7.9in / 20cm
EVO5020/PL50	32in / 81.3cm	7.9in / 20cm
EVO6020/PL60	32in / 81.3cm	7.9in / 20cm

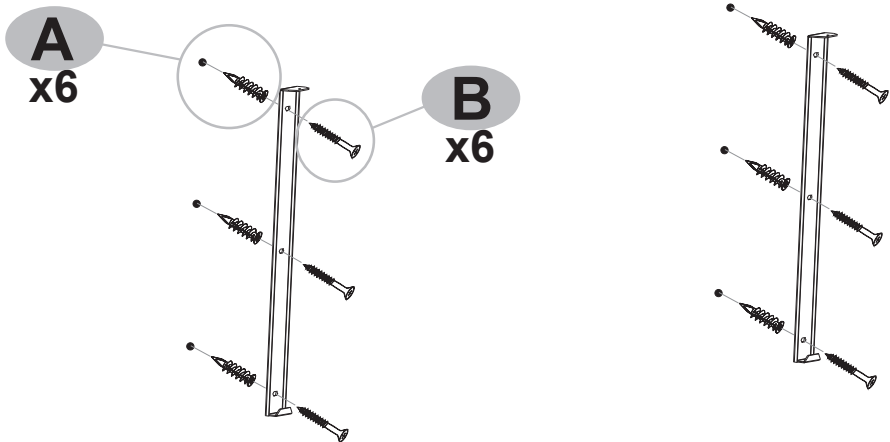

3. Hang the fireplace on the mounting bracket. Secure the fireplace to the mounting bracket with the two screws removed in Step 1.

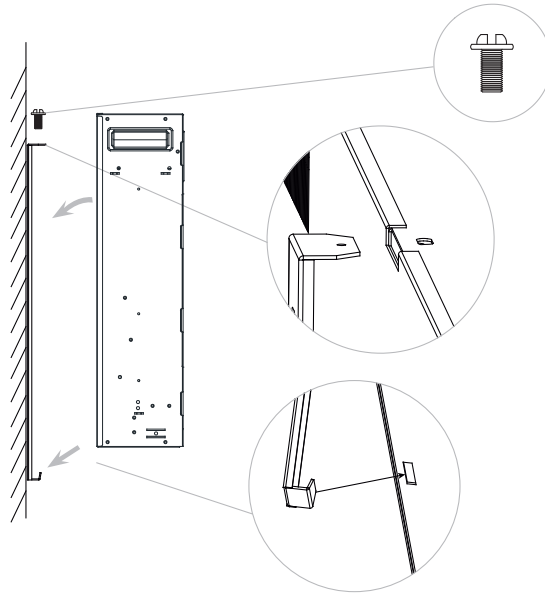


4. For the aesthetics of the product, you can add the side frame to the sides of the fireplace. Remove the two screws on the top of fireplace and save them for later use. Place decorative crystals inside the fireplace.

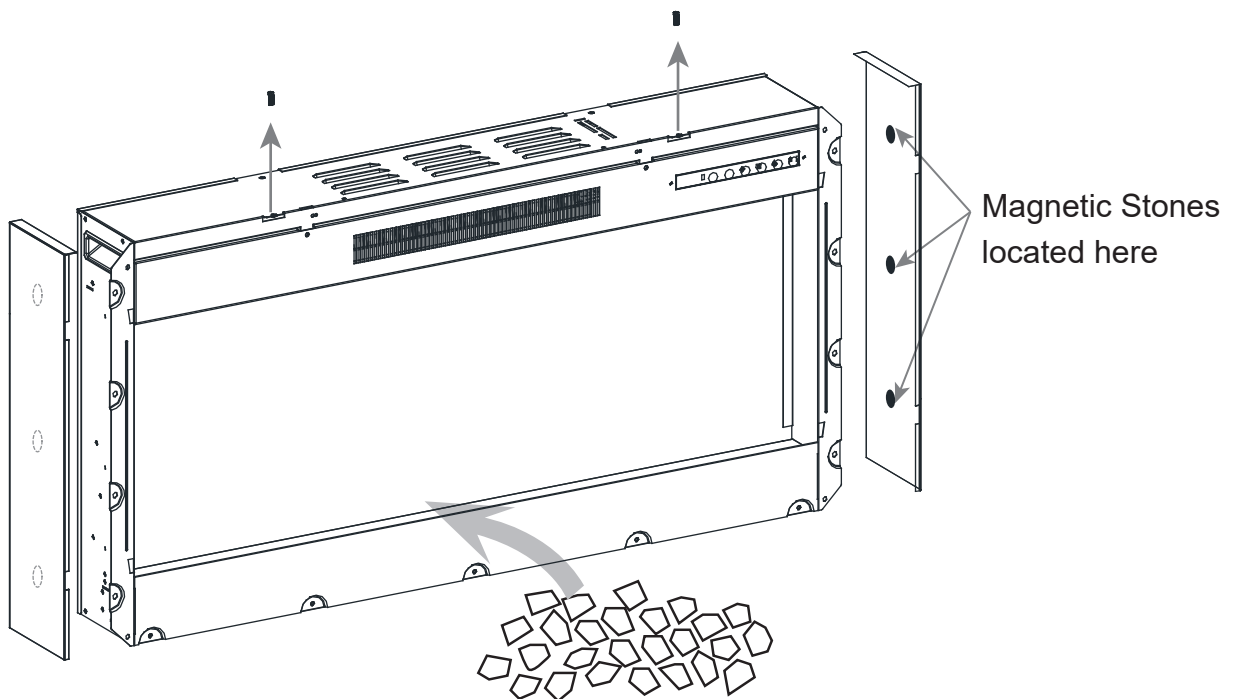


5. Put the glass front panel on the fireplace.

CAUTION: Careful when handling glass to prevent injury or damage.

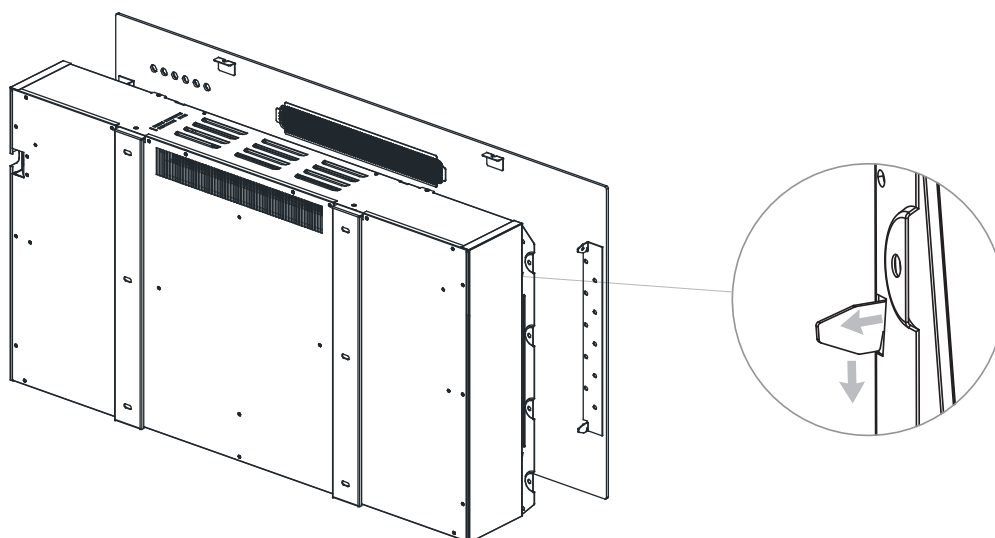

6. Secure the glass front to the fireplace with the screws removed in step 4.

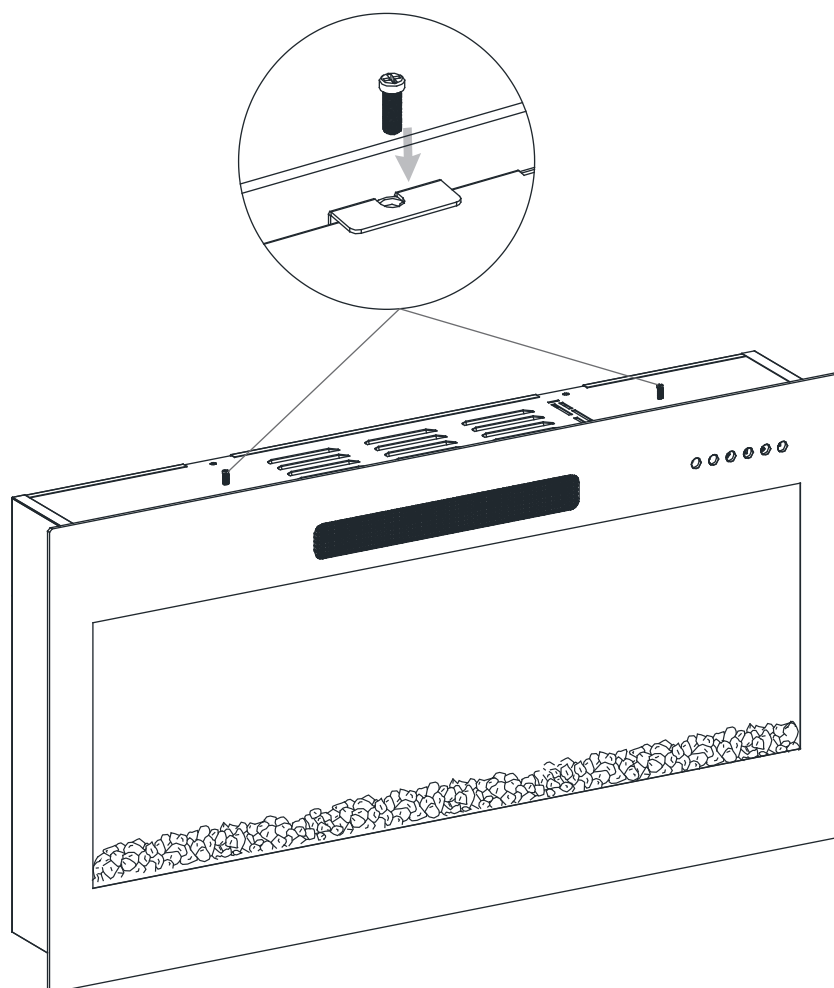

INSTALLATION (BUILT IN WALL)

PREPARATION: This section provides step-by-step instructions for installing a fireplace cabinet, including location selection, wiring compliance, and appliance testing.

1. The location for the fireplace cabinet should be at least 0.9m away from combustible materials and moisture-prone areas.
2. Prior to installation, the appliance should be tested by plugging it into a 120 Volt grounded outlet.
3. The dimensions of the cabinet and the back of the fireplace are provided for different models.
4. The installation process involves removing the mounting bracket, securing the fireplace to the cabinet, placing decorative crystals, and attaching the glass front panel.



NOTE: Due to the many different materials used to build walls, it is highly recommended that you consult your local builder before you install this appliance on a wall.

Cabinet dimensions


Cabinet	W	D	H
EVO3620/PL36	33.9 in / 86.1 cm	5.7 in / 14.6 cm	18.4 in / 46.7 cm
EVO4220/PL42	39.9 in / 101.4 cm	5.7 in / 14.6 cm	18.4 in / 46.7 cm
EVO5020/PL50	47.9 in / 121.7 cm	5.7 in / 14.6 cm	18.4 in / 46.7 cm
EVO6020/PL60	57.9 in / 147.1 cm	5.7 in / 14.6 cm	18.4 in / 46.7 cm

The back of the fireplace dimensions


fireplace	W1	D1	H1
EVO3620/PL36	33.4 in / 84.9 cm	4.7 in / 11.9 cm	18.1 in / 46 cm
EVO4220/PL42	39.4 in / 100.2 cm	4.7 in / 11.9 cm	18.1 in / 46 cm
EVO5020/PL50	47.4 in / 120.5 cm	4.7 in / 11.9 cm	18.1 in / 46 cm
EVO6020/PL60	57.4 in / 145.9 cm	4.7 in / 11.9 cm	18.1 in / 46 cm

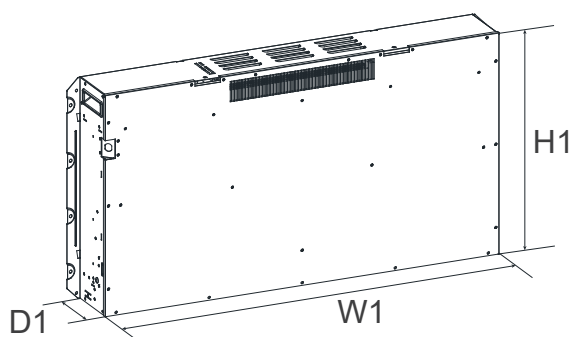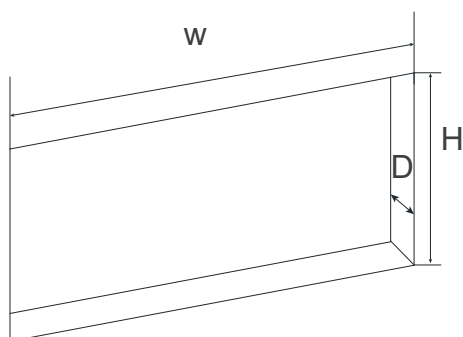


1. Remove the mounting bracket from the back of the fireplace.

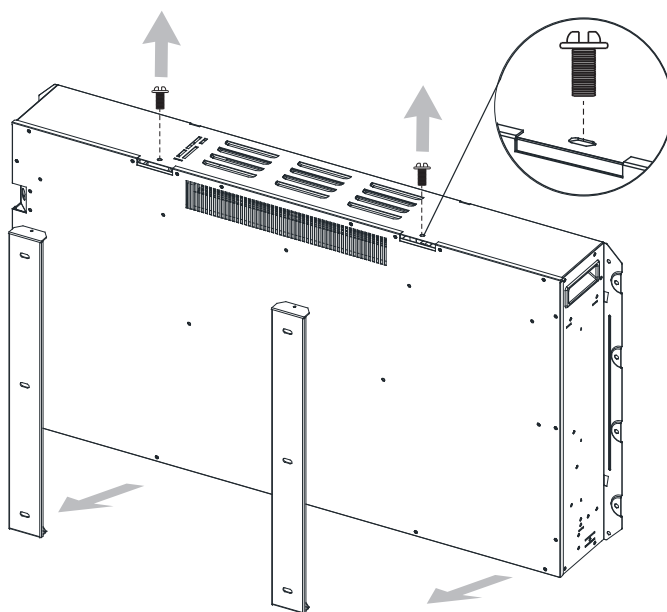


2. Remove the two screws on the top of fireplace and save them for later use.
Plug into the power supply and push the fireplace into the cabinet .

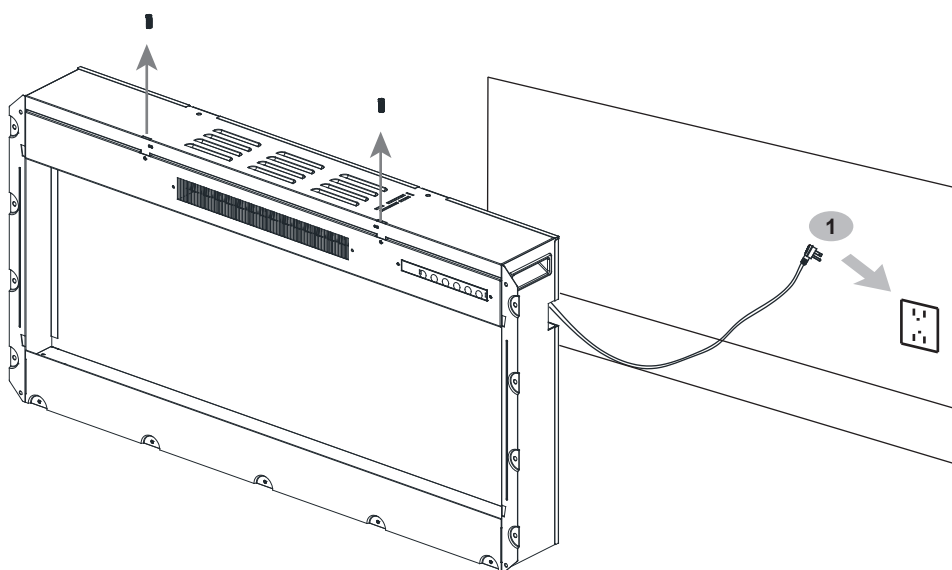

3. Use supplied screws to secure the fireplace to cabinet.

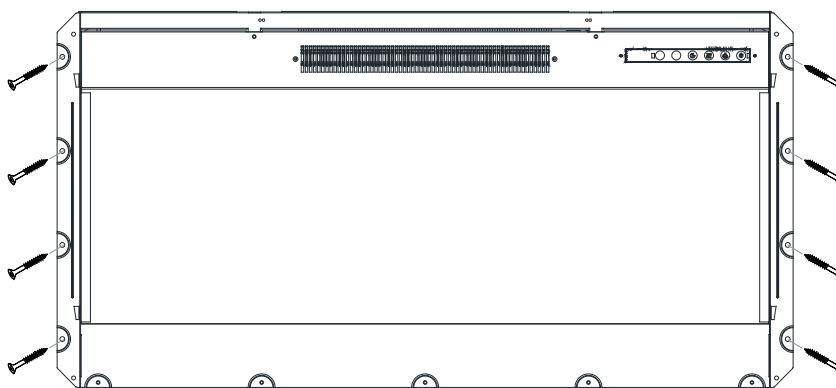


4. Place decorative crystals inside the fireplace.

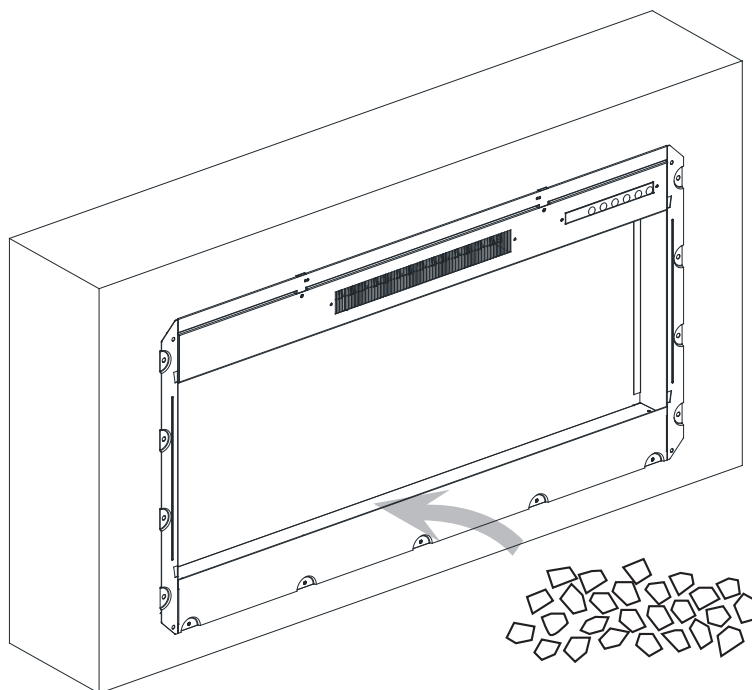

5. Put the glass front panel on the fireplace.

CAUTION: Careful when handling glass to prevent injury or damage.


Secure the glass front to the fireplace with the screws removed in step 2.

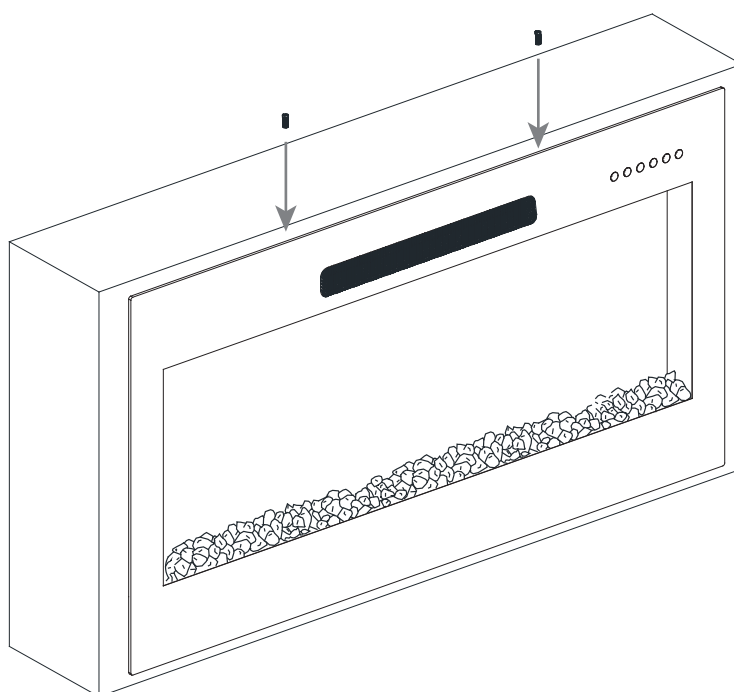

OPERATING INSTRUCTIONS

Control Panel: This section explains the various functions and buttons on the control panel of the unit.

- The control panel is located on the top right corner of the unit.
- To control the unit, touch any button to wake up the control panel. The power button will flash, and all other buttons will light up.
- The control panel will turn off after 10 seconds of inactivity.

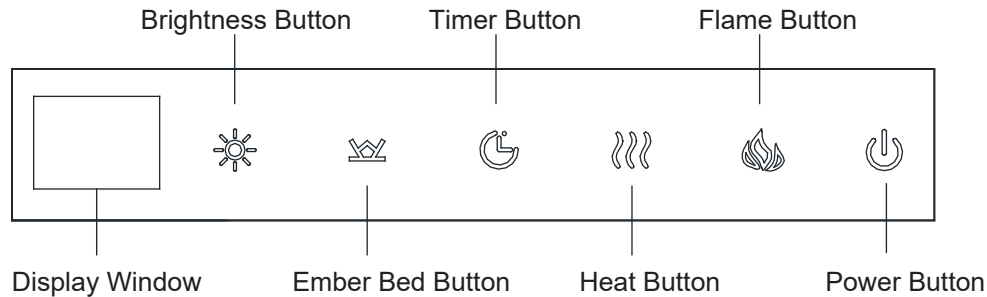

Power Button

The Power Button turns the fireplace ON and OFF. When the fireplace is OFF, touch any button to wake up the control panel, and the power button will flash. Then touch the Power Button to turn on the fireplace. Touch the Power Button again to turn off the fireplace.

The fireplace has a built-in memory function and when turned back on it starts at the last used settings (except timer). If the fireplace is disconnected from the main power source, it reverts to the default settings.

Flame Button

This button is used to turn flames ON, to alter the flame color and to turn flames OFF. Press the Flame button multiple times to cycle through color rotation option (01), 15 color options (02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 16) and flames OFF.

Heater Button

This button is used to turn heater ON, to alter the temperature. With temperature displayed and blink, Press the heat button multiple times to cycle through: 82 °F -ON - 64 °F -66 °F -68 °F -70 °F -72 °F -74 °F -76 °F -78 °F -80 °F (27 °C -ON - 18 °C -19 °C -20 °C -21 °C -22 °C -23 °C -24 °C -25 °C -26 °C).

ON means the heater keep working.

With temperature displayed and not blink, Press the heat button once to turn heater OFF.

Temperature unit convert function: The heater includes Celsius and Fahrenheit temperature scales. To change the temperature unit, turn the heater on, and then press and hold the Power Button for 5 seconds. The current temperature unit display will flash 3 times and convert to the other temperature unit. Note: The remote control cannot convert the temperature units.

Lock and Unlock Heater Function: Press and hold the heater button for 10 seconds. The ember bed will flash 6 times, indicating that the heater function is locked. To unlock the heater function, press and hold the heater button for 10 seconds. The ember bed will flash 6 times, indicating the heater function is unlocked. Note: The remote cannot set the lock and unlock heater function.

Timer Button

The TIMER has adjustable setting at range from 1 hour to 9 hours and OFF. As shown the following: 1h-2h-3h-4h-5h- 6h-7h-8h-9h-OFF. Once you have set the timer, and the timer is up, it will close all the functions and enter standby mode. In this mode, you should touch the power button to restart the fireplace.

Ember Bed Button

This button is used to turn ember bed ON, to alter the ember bed color and to turn ember bed OFF. Press the Ember Bed button multiple times to cycle through color rotation option (01), 15 color options (02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 16) and ember bed OFF.

Brightness Button

This button is used to adjust the brightness of flame and ember bed.

When flame is on and (02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 16) is displayed, press the Brightness Button to change the brightness of the flames from the available options: L5, L4, L3, L2, L1. L5 is the brightest and L1 is the darkest.

When ember bed is on and (02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 16) is displayed, press the Brightness Button to change the brightness of the ember bed from the available options: d5, d4, d3, d2, d1. d5 is the brightest and d1 is the darkest.

NOTE: Brightness control is not operational when the flame setting at 01 and the ember bed light effect setting at 01.

REMOTE CONTROL

Power

The Power Button turns the fireplace ON and OFF.

Heater

The Heater Button turns the heat ON and OFF. Press “+” or “-” button to set the temperature.

Flame

The Flame Button turns the flame ON and OFF. Press “+” or “-” button to set the flame color.

Ember bed

The Ember Bed Button turns the ember bed ON and OFF. Press “+” or “-” button to set the ember bed color.

Timer


The Timer Button turns the timer ON and OFF. Press “+” or “-” button to set the timer.

Brightness

The Brightness Button is used to adjust the brightness of flame and ember bed. There are 5 brightness levels can be set.

Speed

The speed button is used to adjust the flame speed. There are 5 flame speeds and are shown as P3-P4-P5-P1-P2. The default speed is medium, P3. The fastest flame speed is P5, and the slowest flame speed is P1.

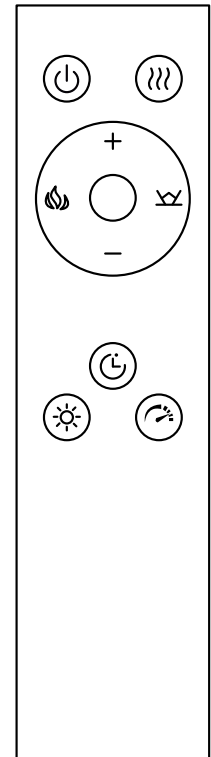


BATTERY REPLACEMENT

The battery compartment is located on the back end of the remote control.

1. Press and slide the battery cover open.
2. Insert two 1.5V (AAA) batteries ensuring they are installed correctly with regard to the polarities (+ and -) marked on the inside of the battery compartment.
3. Replace the battery cover.

NOTE: The batteries should be removed if the product is to be left unused for a long time.

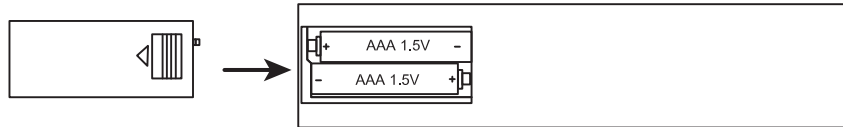

When replacing the batteries, replace both batteries at the same time with new batteries of the correct type.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nicad, Nimh, etc) batteries.

WIFI OPERATION

INSTALL TuyaSmart life


There are 2 ways to install TuyaSmart;

1. Search for “TuyaSmart life” in the APP store on your phone; download and install.
2. Scan the QR code below with your mobile phone.



WIFI SETTING AND FIREPLACE OPERATION

NOTE: Before log in TuyaSmart, Make sure the Wi-Fi signal is good and know the Wi-Fi account and password. Then pressing the timer button 5 seconds until “ -- ” blink quickly to activate WiFi.

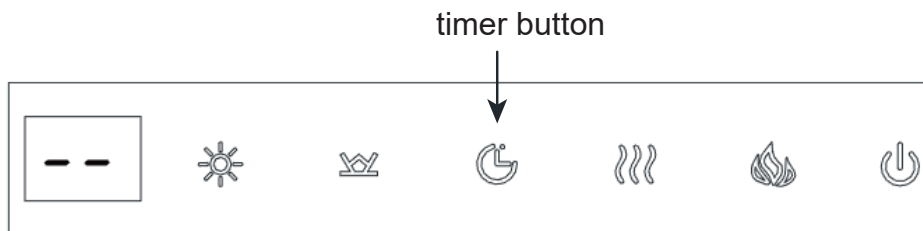

1. Create an account and log in.(Figure 1)
2. When you log in, the APP will scan and add the fireplace to APP(Figure.2) automatically. Touch “Add” to enter in Figure 3. Touch “+” to set your Wi-fi account and password(Figure 4). Touch “Next” to enter Figure 5. Touch “Done” to finish Wi-fi setting.
3. You will proceed to the app interface (Figures 6 and 7) and can operate the fireplace via Wi-Fi.

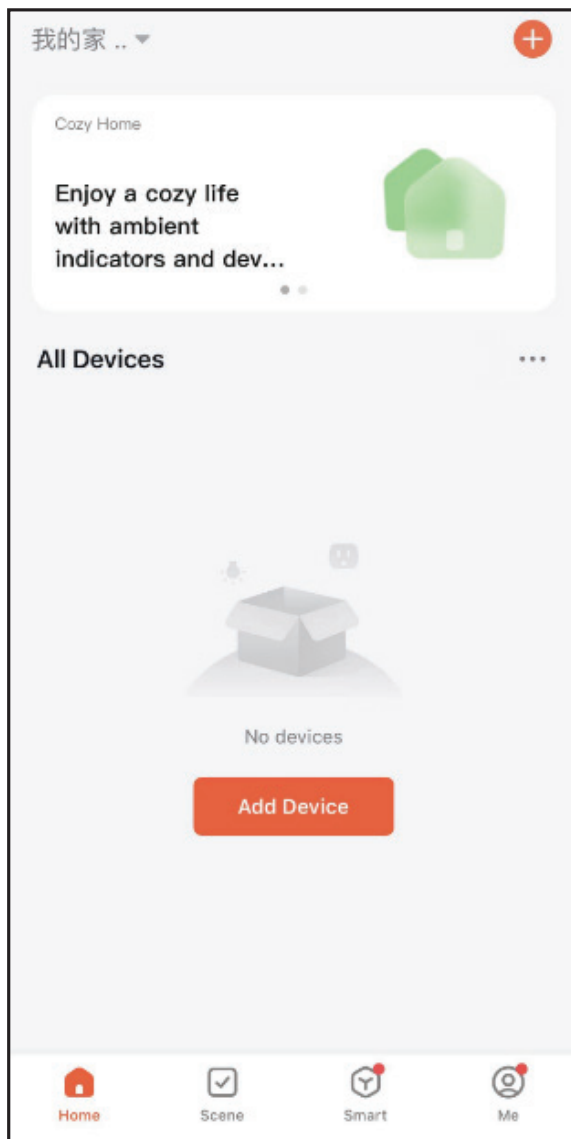


Figure 1

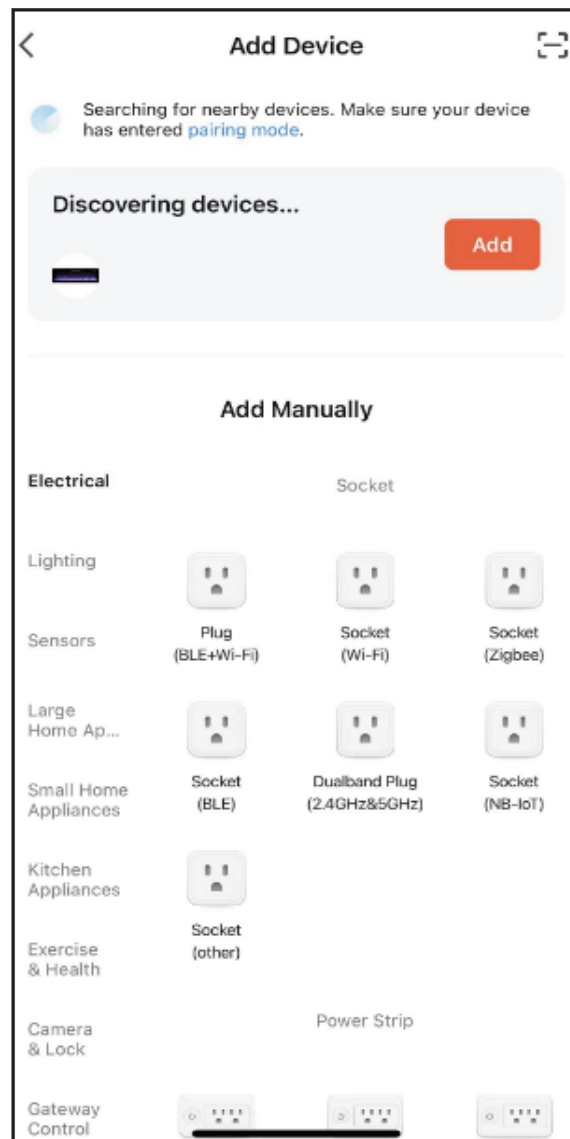


Figure 2

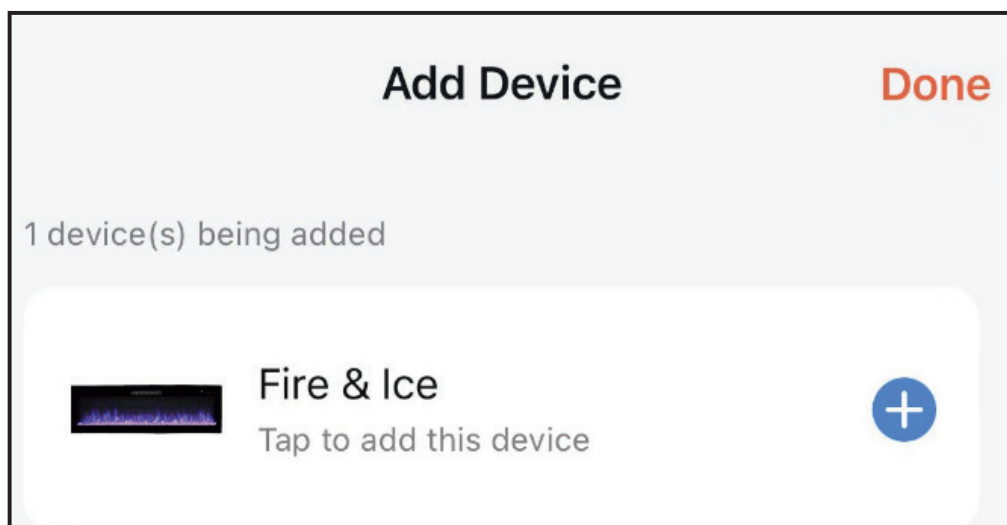


Figure 3

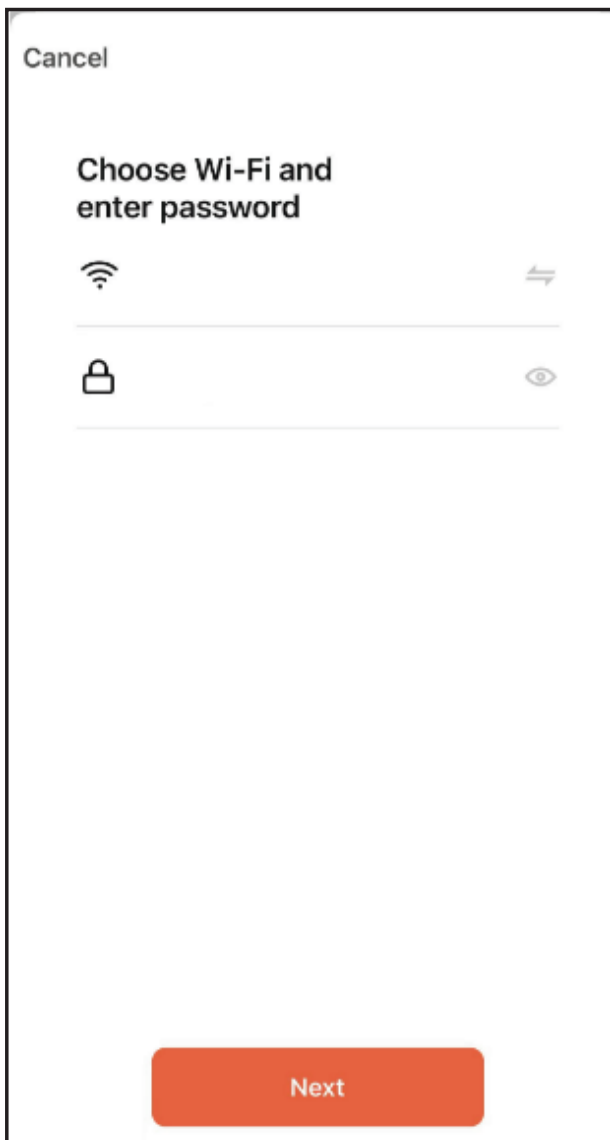


Figure 4

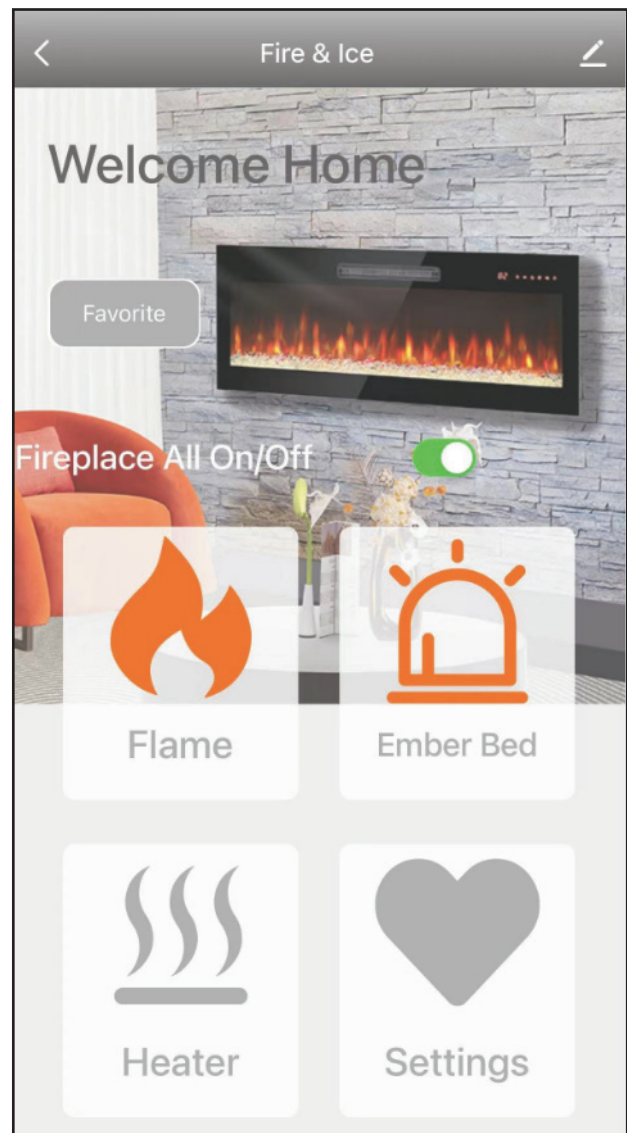


Figure 6

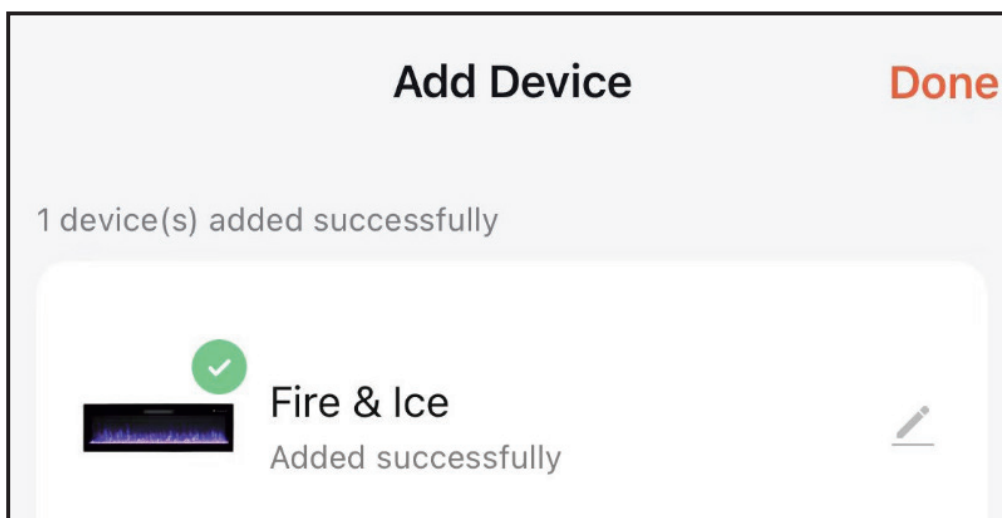



Figure 5

MAINTENANCE


Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth.

DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.


The motors used on the fan and the flame generator assembly are pre-lubricated for extended bearing life and require no further lubrication. However, periodic cleaning/vacuuming of the fan/heater unit is recommended. Make sure the unit is turn OFF and unplugged whenever you are cleaning the heater of fireplace.

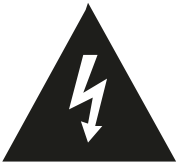

WARNING: Make sure the power is turned off before proceeding. Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician in accordance with national and local codes. If repairing or replacing any electrical component or wiring, the original wire routing, color coding and securing locations must be followed.

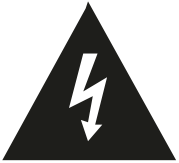

WARNING: Electric outlet wiring must comply with local building codes and other applicable regulations to reduce risk of fire, electric shock and injury to persons.

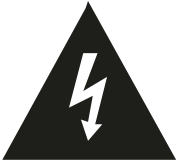

WARNING: Do not use this fireplace if any part of it has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the electrical system.



WARNING: Disconnect the power before attempting any maintenance or cleaning to reduce the risk of fire, electrical shock or personal injury.



WARNING: During any service of this appliance, the power to the unit must be turned off. Always remember to remove the electrical plug from the wall outlet.



WARNING: When the heater is not in use, the heater should be stored in a dry location, away from possible damage. The power cord should be stored properly to avoid contact with hot or sharp objects.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING

Fault code	Fault Cause	Solution
E3	Heater is not working	Turn the unit off and unplug it from the electrical outlet. Check for dirty or clogged vents. Clean the dust and debris from the vent area. Wait 5 minutes, plug in the fireplace, and then turn it back on. If the heater still doesn't work, contact customer service.

WIRING DIAGRAM

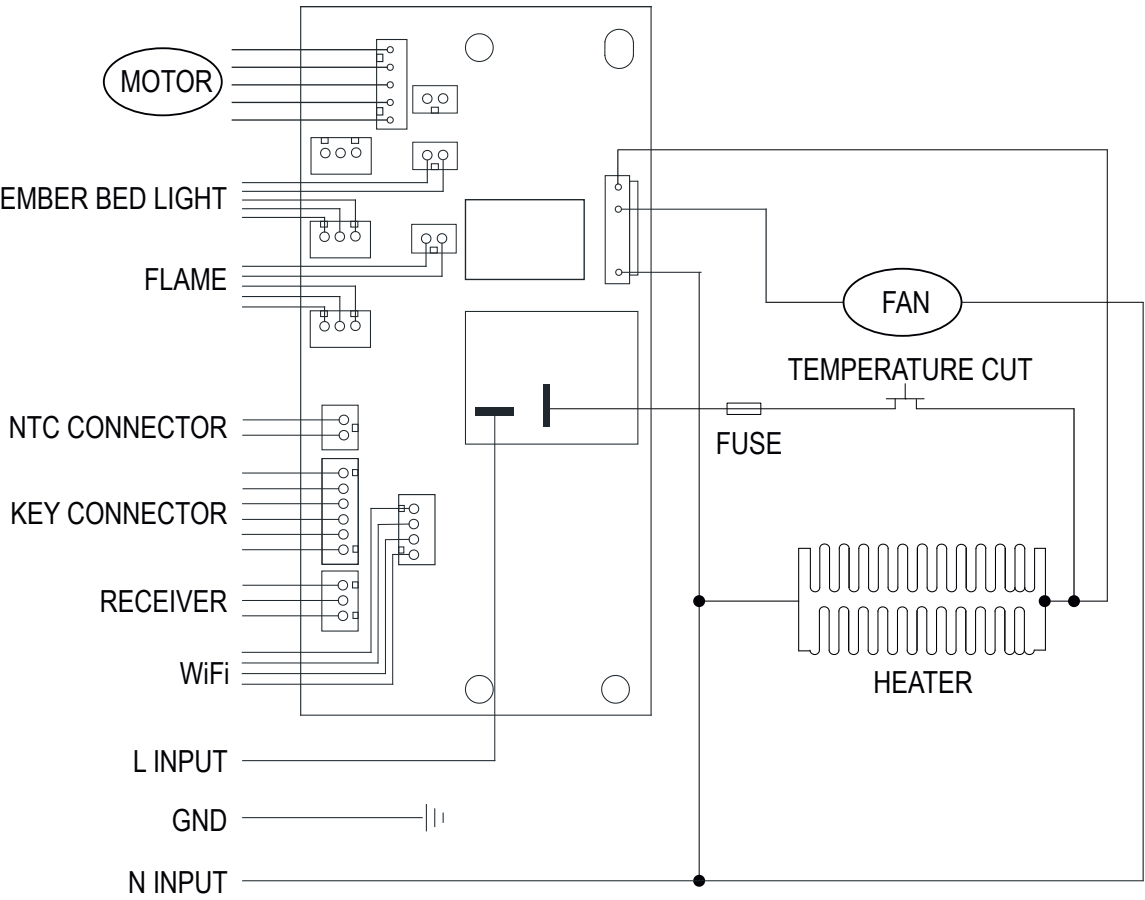

1 YEAR LIMITED WARRANTY



Amantii Imports Corp. One-Year Limited Warranty

Amantii Imports Corp. ("Amantii") warrants that your newly purchased Amantii electric fireplace is free from manufacturing and material defects for a period of one (1) year from the date of original purchase, subject to the terms, conditions, and limitations outlined below.

WARRANTY APPLICATION & EXCLUSIONS

This limited warranty applies exclusively to Amantii electric fireplaces purchased in Canada or any of the 50 States of the United States, including the District of Columbia. It is extended only to the original purchaser and is non-transferable. Proof of purchase from an authorized supplier is required.

WARRANTY COVERAGE AND TERM

Products covered under this warranty have been factory-tested and inspected prior to shipment. Amantii warrants that these products are free from defects in material and workmanship under normal use and service for one (1) year from the date of original purchase.

Where applicable, any implied warranties are also limited to one (1) year, unless restricted by local law.

ADDITIONAL WARRANTY CONDITIONS

Proper Installation & Operation:

This electric fireplace must be installed and operated in full compliance with the installation and operating instructions provided. Any unauthorized repair, modification, misuse, accident, or abuse will immediately void the warranty.

Original Owner Only:

This warranty applies only to the original owner, provided the product was purchased through an authorized Amantii dealer.

Defect Confirmation:

Warranty coverage is limited to repair or replacement of parts confirmed to be defective in material or workmanship after inspection by Amantii. Defective parts must have been subject to normal use and conditions.

Refund Option:

Amantii reserves the right to discharge all warranty obligations by refunding the wholesale price of the defective part(s).

Warranty Voids Include (but are not limited to):

- a. Exposure to prolonged moisture or condensation.
- b. Unauthorized alterations, willful abuse, accidents, or misuse.
- c. Failure to present original proof of purchase.

Costs Not Covered:

This warranty does not cover labor, installation, construction, transportation, or other incidental costs related to service, repair, or replacement of defective parts.

Limitation of Liability:

The owner/user assumes all other risks, including direct, indirect, or consequential damages arising from the use—or inability to use—the product, except where prohibited by law.

No Additional Warranties:

All other warranties—expressed or implied—relating to the product, its components, or accessories, are hereby excluded.

No Third-Party Authority:

Amantii does not authorize any third party to create or assume obligations or liabilities on its behalf regarding this product.

Exclusion of Third-Party Accessories:

This warranty does not apply to any third-party components or accessories used in conjunction with this product.

WARRANTY SERVICE

To initiate a warranty claim, please contact Amantii Technical Support at:

1.877.850.9458

502-1027 Davie Street, Vancouver, BC V6E 4L2

Please have your proof of purchase, model number, and serial number available.

DEFECT RESOLUTION

If a defect covered by this warranty is confirmed within the one (1) year warranty period, Amantii will replace the defective product or part at no charge. If replacement is not commercially feasible, Amantii may opt to refund the purchase price in lieu of replacement.

1 YEAR LIMITED WARRANTY



Amantii Imports Corp. One-Year Limited Warranty

APPLICATION OF PROVINCIAL AND STATE LAW

This limited warranty gives you specific legal rights, and you may also have other rights which vary from one jurisdiction to another.

The provisions of the United Nations Convention on Contracts for the Sale of Goods do not apply to this limited warranty or to the sale of any products covered by it.

GENERAL TERMS

Amantii reserves the right to make changes at any time, without prior notice, to the design, materials, specifications, or pricing of its products. The company also reserves the right to discontinue any product or style without incurring any obligation.

Please note:

This limited warranty does not apply to the plastic tray, LED Lights, back glass, or front glass of the unit.

CONTACT INFORMATION

Canada Order Desk:

Phone: 877.850.9458 - Ext 3

Email: westcanorders@cannedheat.com

Email: eastcanorders@cannedheat.com

USA Order Desk:

Phone: 877.850.9458 - Ext 2

Email: usaorders@cannedheat.com

Technical Support:

Phone: 877.850.9458 - Ext 5

Email: cdn-service@amantii.com

Headquarters:

Phone: 604.684.6040

Explore More from Cannedheat



Thank you for purchasing a Cannedheat product – Where Innovation Meets Ambience

At Cannedheat, we're passionate about redefining comfort and style through cutting-edge fireplace solutions. With decades of industry expertise, our mission is to deliver exceptional design, quality, and performance across a wide range of electric and gas fireplace products.

Our Brand Portfolio:

Explore our family of trusted brands, each offering unique features and styles to suit any space:

Amantii Electric fireplace – Sleek, modern electric fireplaces built for indoor and outdoor living. Innovation and elegance at its finest.



Remii Electric Fireplace – Versatile and stylish fireplaces designed for both residential and commercial applications.



Sierra Flame – High-performance gas fireplaces that blend classic aesthetics with modern technology.



Fire & Ice – A bold line known for its vibrant flame colors and contemporary feel, adding personality to any room.



Whether you're a homeowner, designer, or builder, Cannedheat has the perfect solution to bring warmth and style into your space.

CONTACT INFORMATION

Canada Order Desk:

Phone: 877.850.9458 - Ext 3
Email: westcanorders@cannedheat.com
Email: eastcanorders@cannedheat.com

USA Order Desk:

Phone: 877.850.9458 - Ext 2
Email: usaorders@cannedheat.com

Technical Support:

Phone: 877.850.9458 - Ext 5
Email: cdn-service@amantii.com

Headquarters:

Phone: 604.684.6040

What Our Other Brands Offer



Discover the unique strengths of each Cannedheat brand. Use this quick comparison guide to find the right fit for your space, style, and budget.

Brand	Key Products / Focus	Unique Features	Best For
Amantii	Premium Electric Fireplaces	Customizable log sets, Wi-Fi enabled, Bluetooth compatible	Designers, custom home builds
Remii	Standard Electric Fireplaces	Clean design, easy installation, reliable performance	Homeowners, contractors, quick projects
Fire & Ice	Budget-Friendly Electric Fireplaces	Bold flame effects, modern look at an accessible price	First-time buyers, apartments, rentals
Sierra Flame	Gas Fireplaces	Realistic flame, high heat output, traditional and modern models	High-performance heating, classic homes

CONTACT INFORMATION

Canada Order Desk:

Phone: 877.850.9458 - Ext 3
Email: westcanorders@cannedheat.com
Email: eastcanorders@cannedheat.com

USA Order Desk:

Phone: 877.850.9458 - Ext 2
Email: usaorders@cannedheat.com

Technical Support:

Phone: 877.850.9458 - Ext 5
Email: cdn-service@amantii.com

Headquarters:

Phone: 604.684.6040

Stay Connected with All Our Brands



Explore More. Shop Smarter. Stay Inspired.

Visit Our Brand Websites

Learn more, browse our full collections.

Brand

Website

Amantii (Modern Electric Fireplaces)

www.amantii.com



Sierra Flame (Gas Fireplaces)

www.sierraflame.com



Remii (Electric Fireplaces)

www.remii.com



Fire & Ice (Budget Friendly Electric Fireplaces)

www.fireandicefireplaces.com



Customer Support

We're here to help.

Phone: 1-888-406-8764

Email: support@amantii.com

Hours: Monday–Friday, 8am–4:30pm PST

What Our Customers Are Saying

“Our Amantii fireplace transformed our living space. Elegant, modern, and easy to use.”

— Sandra T., Toronto

“Top-notch support and a beautiful product. Highly recommended!”

— Mike R., Seattle

A Special Thank You

“Thank you for being a part of our journey. We invite you to discover everything our family of brands has to offer!”

Warm regards,

The Amantii Team

CONTACT INFORMATION

Canada Order Desk:

Phone: 877.850.9458 - Ext 3

Email: westcanorders@cannedheat.com

Email: eastcanorders@cannedheat.com

USA Order Desk:

Phone: 877.850.9458 - Ext 2

Email: usaorders@cannedheat.com

Technical Support:

Phone: 877.850.9458 - Ext 5

Email: cdn-service@amantii.com

Headquarters:

Phone: 604.684.6040